

MONTIS CZ s.r.o.

Moravská 2715/61, 767 01 Kroměříž

IČ 25583395 montis@montis.cz www.montis.cz

INSTRUCTIONS FOR USE, MAINTENANCE AND WARRANTY TERMS**POP-UP (SCISSOR) TENTS**

1. Product Description

The MONTIS CZ printed tent is intended for presentation, sales, or advertising purposes at trade fairs, markets, promotional events, and other events. It serves as a temporary portable structure with the option of full-colour printing on textile parts (roof, side walls). The product is not intended for long-term outdoor use without supervision, nor as a permanent structure exposed to weather conditions.

2. Instructions for Use**2.1 Unpacking and Assembly**

- Unpack all components and check that they are complete and undamaged.
- Ensure that the installation area is flat, solid, and dry.
- Place the frame on the ground and extend it evenly.
- Fit the roof cover onto the frame and secure it using Velcro fasteners.
- Attach side walls using zippers, straps, or Velcro fasteners if applicable.
- Make sure all joints are properly locked and the structure is stable.

2.2 Anchoring

- To ensure stability, we recommend using weights or anchoring ropes with pegs (included in accessories or according to recommendation).
- When installed outdoors, always make sure the tent is securely anchored against wind.
- Do not leave the assembled tent unattended during deteriorating weather conditions.



+420 730 511 222



montis@montis.cz



www.montis.cz

2.3 Folding and Packing

- Remove any weights or anchoring elements.
- Detach the roof and side walls – fold them only when clean and dry.
- Carefully fold the frame – assembly and disassembly by two persons is recommended.
- Store all parts back in the transport bag to prevent damage to the print or frame.

3. Maintenance Instructions

3.1 Textile Parts

- Clean the roof cover and side walls using a mild textile detergent solution and a soft sponge.
- Never use abrasive cleaners, chlorine-based products, or high-pressure cleaners.
- After cleaning, rinse thoroughly with clean water and allow to dry completely.

3.2 Frame Structure

- Clean aluminium and metal parts with a damp cloth or mild cleaning solution if necessary.
- Lightly lubricate joints and moving parts with silicone oil.
- Avoid contact with aggressive substances and salt water.
- Regularly check the tightening of screws and joints.

3.3 Storage

- Store the tent in a dry, well-ventilated area away from direct sunlight.
- Ensure all parts are clean and dry before storage.
- Long-term exposure to moisture may cause mould or degradation of the fabric.
- Protect printed surfaces from direct UV radiation and mechanical abrasion.

4. Warnings

- Do not use the tent in strong wind (over 40 km/h), heavy rain, snowfall, or storms.
- Do not hang any objects on the frame structure.
- Do not use open flames or direct heat sources near textile parts.

- In windy conditions, always secure the tent properly or dismantle it.
- Do not use a damaged or deformed tent.
- For frequent outdoor use, regular inspection and servicing are recommended.

5. Materials, Manufacturing and Graphic Processing

- **Fabrics and Water Resistance**

The fabrics used are factory-treated with an impregnation providing increased water repellency. However, these materials are not 100% waterproof. Due to the construction of the covers (made of multiple sewn parts), partial water penetration through seams may occur, especially in new products. Needle holes created during sewing gradually close with normal use, improving water resistance over time. This characteristic is not considered a product defect.

- **Material and Colour Selection**

If the customer does not explicitly specify colour, material type, or manufacturing method in the order, the manufacturer reserves the right to select an appropriate option based on current material availability and technological possibilities.

- **Graphic Motifs and Seam Alignment**

For printed products, please note that complex or large-scale graphics may not always align perfectly across sewn sections and may partially overlap seams or fabric folds.

If precise graphic alignment or exclusion of graphics from seams is required, we recommend creating a graphic preview in advance, producing a sample for larger quantities, or consulting this requirement with a sales representative or production team beforehand.

6. Warranty Terms

6.1 Warranty Period

- Frame structure: 24 months
- Textile cover and print: 12 months

The warranty period begins on the date the product is received.

6.2 Warranty Coverage

The warranty covers manufacturing defects in materials or workmanship that prevent normal use of the product. Depending on the nature of the defect, MONTIS CZ s.r.o. will provide repair, replacement, or an appropriate price reduction.

The method of settlement is determined by the manufacturer.

6.3 Warranty Exclusions

The warranty does not apply to:

- damage caused by incorrect assembly, handling, or transportation
- use in unsuitable weather conditions
- use of non-original parts, bases, or anchoring systems
- normal wear and tear and colour changes caused by UV radiation
- cracks, tears, or damage caused by mechanical stress
- moisture, mould, rust, oils, chemicals, or improper cleaning
- intentional damage, third-party interference, or force majeure events (storm, wind, fire, flood)

Normal fading of the print or slight colour changes after 6 months of outdoor exposure are considered a natural effect of UV radiation and are not regarded as defects.

7. Service and Spare Parts

MONTIS CZ s.r.o. ensures the availability of spare parts and service support during and after the warranty period.

If repair is not feasible, the manufacturer may offer an equivalent replacement or an appropriate price reduction.

8. Final Provisions

These warranty terms and operating instructions are valid from 1 January 2025 and replace all previous versions.

All legal relationships are governed by Act No. 89/2012 Coll., the Civil Code. Statutory rights of the buyer remain unaffected by the application of this warranty.

Kontakt pro reklamace a servis:

MONTIS CZ s.r.o.

Moravská 2715/61, 767 01 Kroměříž

montis@montis.cz www.montis.cz



+420 730 511 222



montis@montis.cz



www.montis.cz



Zkontrolujte obsah balení a výbavy. Uchopte konstrukci za střed a částečně roztáhněte. Nasadte volně potah.



Zajistěte potah suchými zipy v rozích a textilní objímkou ve vrcholu.

Tahem od sebe roztáhněte konstrukci.




Zajistěte pojistku a vypněte potah.

Připevněte střední část potahu poutky ze suchých zipů, zkontrolujte rohy.



Povolte pojistku stojky, přišlápněte patku, vysuňte stojky na jedné a pak na druhé straně do požadované výše.

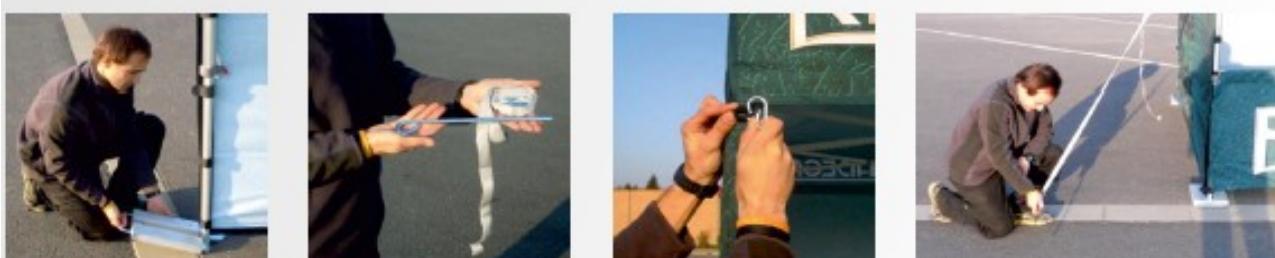

Chraňte stánek v rozích proti větru kovovými nebo plastovými zátěžemi a zavětrovacími lankami s ocelovými kolíky.

Technické změny vyhrazeny. Při nedodržení pokynů v návodu nebude brán zřetel na případnou reklamací.

Installation Manual